

LYMAN GAS CHECK SEATER

Once installed this device holds the push rod of your Sizer Lubricator up to allow firm square seating of all types of gas checks.

INSTRUCTIONS

1. Be sure that the operating handle is pushed all the way back and the ram is in the full up position.
2. Place the top (small end) of the Gas Check Seater against the push rod at the bottom of the frame casting and slide it up into the cavity in the casting.
3. Push the lower end (large end) into position around the threaded push rod adjustment screw and seat gas checks.

To Remove: Reverse the above steps.

2980850

6/04