

Pads and insert dimensions shown below are provided to determine the correct amount of material that can safely be ground.

